



TO ALL USERS: PLEASE READ THE INSTRUCTION GUIDE BEFORE USING ON THE DUPLICATOR

CD/DVD-Backup Simple Instruction Guide

The procedures are as follows:

Step 1 –Turn on the duplicator

- 1) Insert the master disc into the CD/DVD drive and then the blank disc into the CD/DVD±RW drive.
- 2) Select the Copy function and press enter.
- 3) Select DVD-Backup Speed (16x,8x, 4x, 2x, or 1x) OR CD-Backup Speed (52x, 48x, 40x, 32x ----) and then press Enter
- 4) Press enter again.
- 5) When finished, the disc in the target drive will eject itself.

IMPORTANT STEP

Step 2- If you continue using the same Master disc, do not close the Target Tray before performing these simple steps.

- 1) Make sure the Target tray is still open
- 2) Press the 'ESC' button first
- 3) Then put in another blank disk and finally close the Target tray
- 4) Select the Copy function and then press Enter.
- 5) Select the DVD or CD Speed and then press Enter.
- 6) When the duplication is finished, the Target Drive will eject itself

Step 3- When you want to use a different master disc...

- 1) Make sure you take out the master disc.
- 2) Choose the Copy Disk function.
- 3) Press enter.

REMOVE ALL CDs WHEN YOU ARE FINISHED COPYING AND TURN IT OFF.